


Fitting instructions

DucoMax 'SR'

L0004090-A 18/01/2021

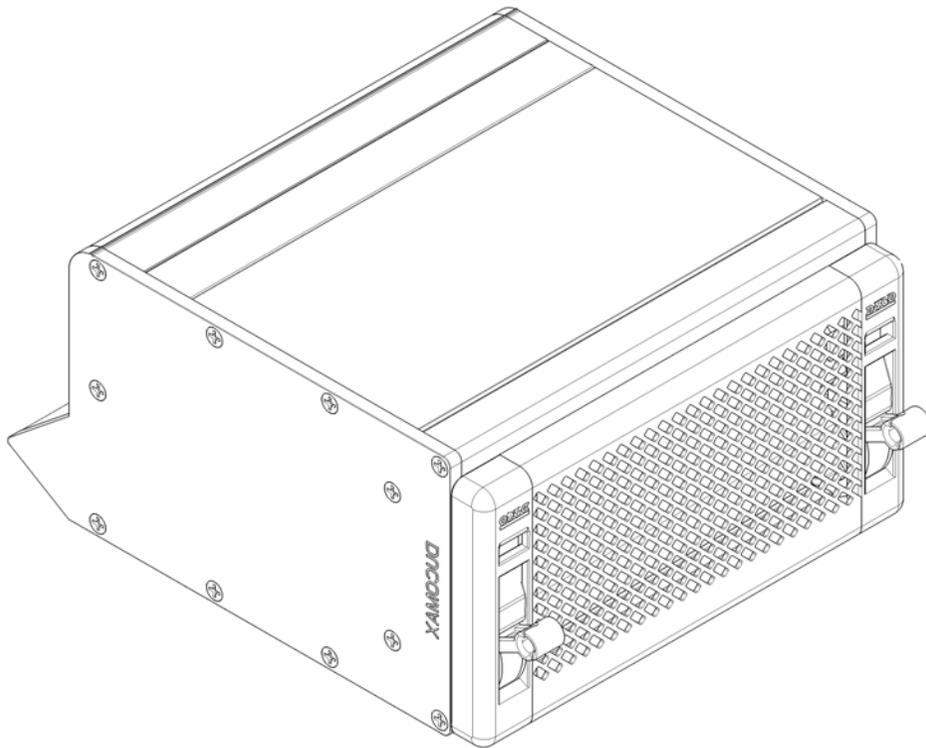




CONTENTS

1. Exploded view
2. BOM
3. Components list
4. Product types
5. Cut lengths
6. Assembling stock lengths
7. Assembling custom lengths
8. Packaging
9. Operation
10. Stacking pattern

1

Fitting with anchor

- 1) Affix 2x swellable tape around the casing. (15x20 mm)
- 2) Screw the anchor down at the top of the window ventilator. Screw it down every 700 mm. Min. of 2 screws per anchor. (min. of 3.5 x 30 mm)
- 3) Fit the window ventilator on the window and screw it down. (min. 3.5 x 30 mm)
- 4) Tilt the window into the opening, shim the window ventilator every 700 mm and screw the anchors down every 700 mm to the building structure. (min. of 3.5 x 50 mm)

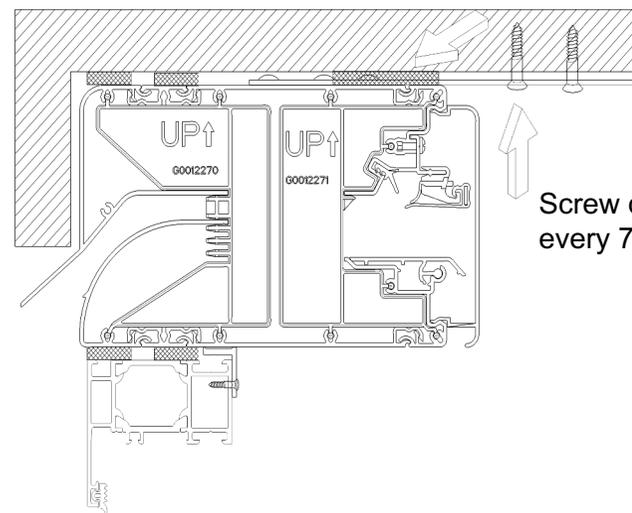
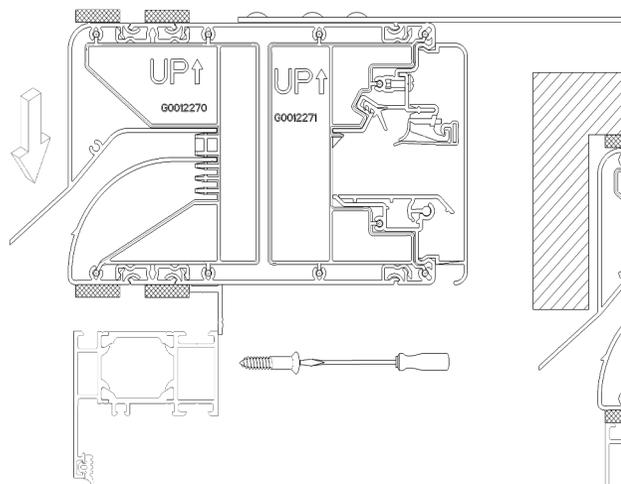
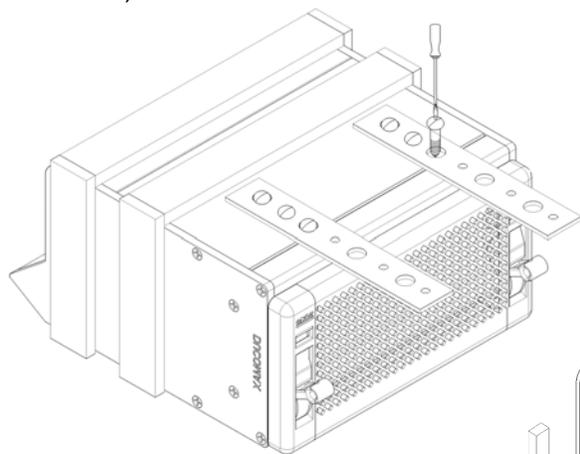


4a) Shimming window ventilator every 700 mm

Screw down every 700 mm

2 Fitting with screw fastening

- 1) Affix 2x swellable tape around the casing. (15x20 mm)
- 2) Screw the window ventilator onto the window with a screw (3.5 x 30 mm) in the grille every 250 mm.
- 3) Tilt the window in the opening, shim the window ventilator and screw the window ventilator down at the connecting pieces. (min. screw dia.: 3.5 x 50 mm)

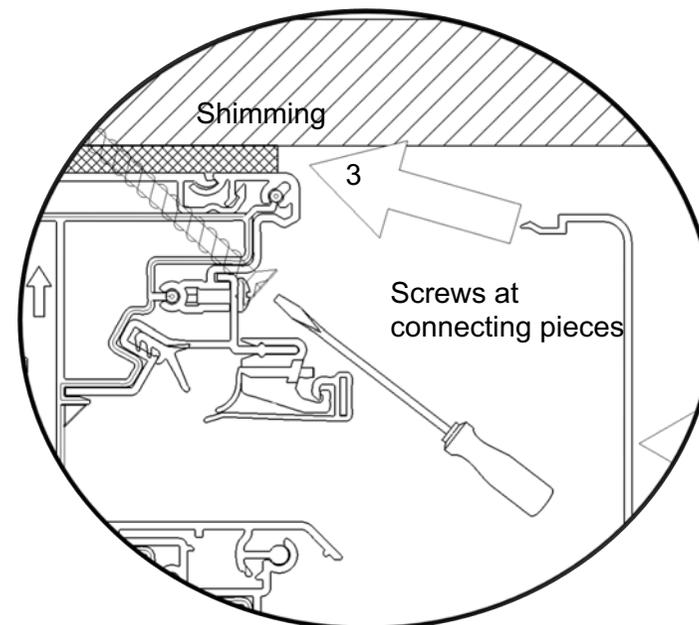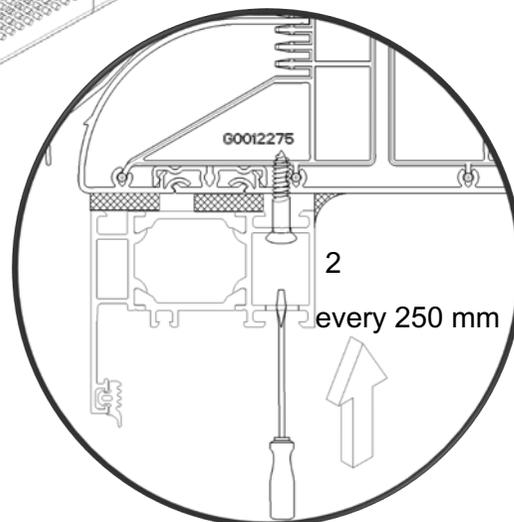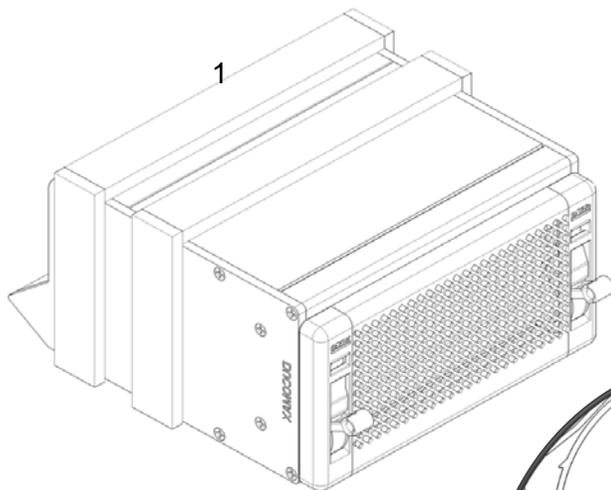

2

Fitting CK

- 1) Affix 2x swellable tape around the casing. (15x20 mm)
- 2) Fit the window ventilator in the opening.
- 3) Screw the window ventilator onto the window with a screw (3.5 x 30 mm) in the grille every 250 mm.

