

Software update

Duco Silent (Tronic) System¹, Duco Focus (Tronic) System,
 Duco Hygro Plus System, Duco Energy System, Duco Eco (Tronic) System

L8000022 21.10.2022

<p>1 Disconnect the DucoBox from the power supply. If the system is valve-controlled, the valves can remain connected.</p>	
<p>2 Connect the Communication Print (WIFI); it may also be part of the DUCO Installation Kit. Make sure the latest/needed software version is in the Communication Print (WIFI) → if not, insert an SD card with the desired software version!</p>	
<p>3 Put the DucoBox under tension again.</p>	
<p>4 The DucoBox starts the update → during the update, the LED indication will flash purple.</p>	<p>PURPLE (flashing)</p>
<p>5 Wait for the DucoBox to finish updating: LED indicator should have stopped flashing purple.</p>	
<p>6 Press the INST button: LED indicator starts flashing green.</p>	<p>GREEN (flashing)</p>
<p>7 Then press the INST button for a few seconds: all LED indications of the connected components will flash red (= reset of the existing network)</p>	<p>INST </p> <p>RED (flashing)</p>
<p>8 After this, the DucoBox will reboot: LED indicator on the DucoBox no longer lights up red.</p>	
<p>9 All components must be (re)paired with the network. Follow the standard instructions for this.</p>	

TIP: check the flow rates for possible deviations after the update.

¹ Only possible when using DucoBox Silent Connect